 


# 60cm Freestanding 14 Place

## DISHWASHER

PRODUCT CODE: EED614TBK

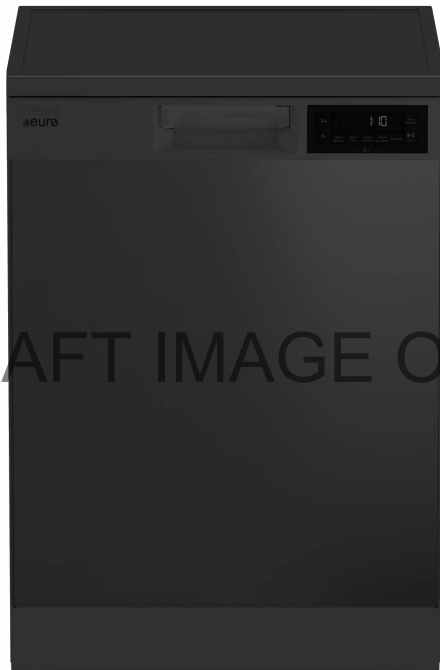

### FEATURES:

- + 14 place setting
- + Black finish
- + Slim Panel Design
- + Half load function
- + Extra Dry function
- + Turbo function + 0-24
- + Delay Timer 0-24h
- + Height adjustable top basket
- + Concealed heating element
- + Removable top cover
- + LED Screen/Buttons
- + 8 Wash programs
  - + Delicate
  - + Eco (45 degrees)
  - + Auto
  - + Daily
  - + Delicate 40
  - + Intensive 70
  - + Quick
  - + Mini
  - + Prewash
  - + Mix
  - + Intensive 70
  - + Quick
  - + Mini 30
  - + 3.5 star energy rating
  - + 4 star water rating

### SPECIFICATIONS:

Water Consumption	13.8 Litres per wash (4 star water rating)
Energy Usage	275kwh per year (Cold water connection, using ECO program seven times per week) (3.5 star energy rating)
Noise Level	47db
Inlet Hose/Drain Hose Length:	1.55m / 1.72m
Water Connection	Cold water (as dishwasher has its own heating element)
Weight	49.8kg (Gross) / 44.6kg ( Net )
Water Consumption	9347726028446

**euro appliances**

EMBRACE EUROPEAN QUALITY + PASSION

CUSTOMER SUPPORT TOLL-FREE **1800 440 335**

**DISCLAIMER:** Please note that the measurements and model appearances may change at any time. Euro Appliances reserves the right to change the specifications without notice.

[www.euroappliances.com.au](http://www.euroappliances.com.au)

cooking | laundry | refrigeration | alfresco



eurokitchen



### PRODUCT DIMENSIONS

598mm wide x 600mm depth x 845mm height  
(adjustable feet 20mm)

### KEY FUNCTIONS

#### 14 PLACE SETTINGS

With 14-place settings the EED614TBK provides results with greater flexibility allowing you the flexibility to select the correct setting for your dish-washing requirements.

#### 3 LEVEL HEIGHT ADJUSTMENT TOP BASKET

The adjustable top basket can be set higher or lower in the washing baskets, ensuring wash space for those larger cooking utensils and dishes.

#### SIMPLE ELECTRONIC PROGRAM CONTROLLER

This EED614TBK dishwasher operates via an electronic push button control. You can select your preferred program by using the electronic push buttons on the top right of the front panel.

#### 8 WASH PROGRAMS

The EED614TX dishwasher provides you with the choice of 8 different wash programs to ensure you can select the type of wash which best suits whether it be those few dirty dishes or after that large dinner party.

### INSTALLATION INFORMATION

Please refer qualified installer to our product instruction manual.

Drain pump filter: requires cleaning monthly. This will ensure no interruptions with the dishwasher operation.

