


Florence Mirror Cabinets

1. ENSURE YOUR WALL IS FLAT & LEVEL

Before starting, check that your wall is level and flat. If not, the cabinet will need to be packed out so that it is sitting level, otherwise the cabinet will twist causing the doors to be out of alignment and not function correctly.

It is recommended that the cabinet are installed over 300mm from any wet area such as baths, spas and showers to reduce product issues caused by water damage.

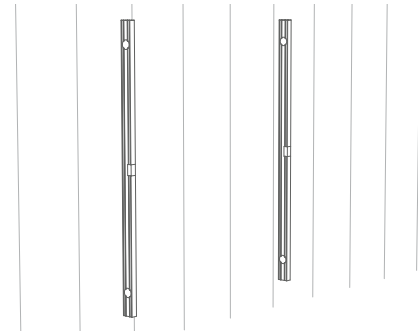

Ensure the wall is level prior to installation

2. FIX YOUR MIRROR CABINET LEVEL WITH THE WALL

Locate the studs in the existing wall.

Fix your cabinet using screws through the solid back of the cabinet. The screws should be fixed to the stud material and have a pan or counter sunk head. Provide a horizontal row of screws within 100mm vertically from the top and bottom of the cabinet and screwed into each corner of the mirror cabinet. The length of screws should be at least 60mm

The screws closest to the left and right edge of the mirror cabinet should be within 100mm of each side in all four corners of the cabinet.

Ensure the mirror cabinet is level on top and the side using a spirit level.

