


# flinders

## Polymarble shower base Corner

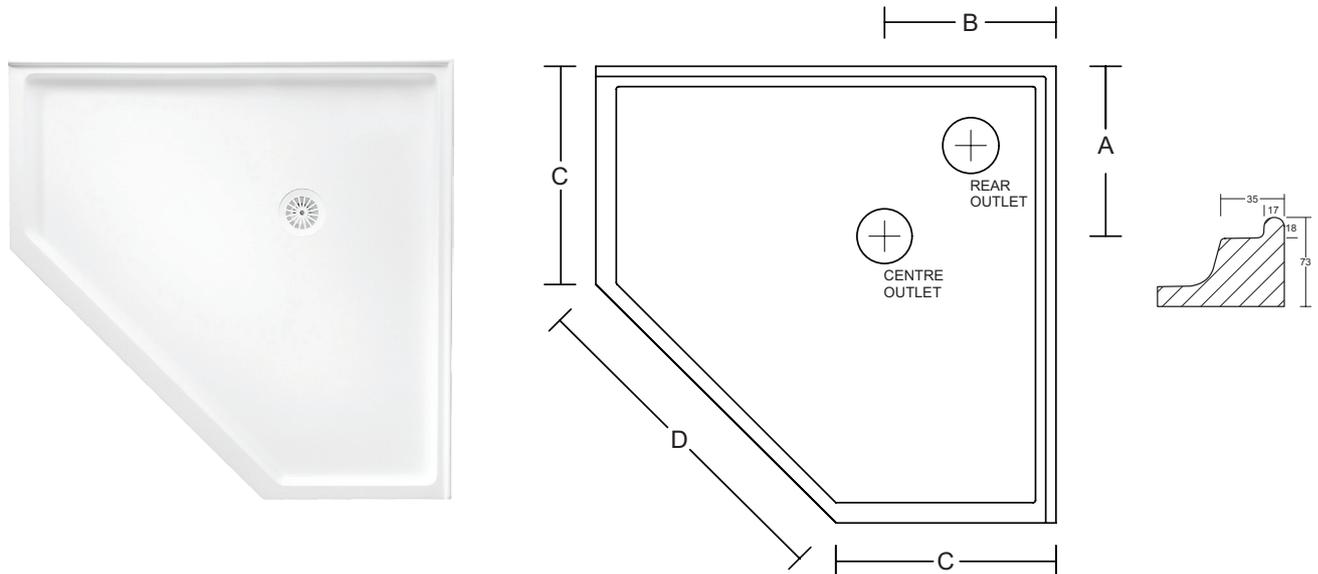

The Flinders Polymarble shower base is made from high strength polymarble compound - which is a hardwearing, solid, fully moulded material that is ideal for bathroom surfaces.

MATERIAL	Polymarble
CONSTRUCTION	Requires mortar bed support
STEP HEIGHT	73(±2)mm(including tile flange)
TILE LIP	17mm tile lip
ALCOVE FITTING	No
WASTE	Integrated waste with 50mm male thread

PRODUCTS	COLOUR	CODE	ACTUAL SIZE	A	B	C	D
Standard Corner	White	SB39CW	914 W x 914 D x 73 H REAR OUTLET	150	150	430	680
		SB69CW	914 W x 914 D x 73 H CENTRE OUTLET	335	335	430	680
		SB29CW	1000 W x 1000 D x 73 H REAR OUTLET	150	150	430	800
		SB79CW	1000 W x 1000 D x 73 H CENTRE OUTLET	355	355	430	800
Made to Order Corner	White	SB59CW	1200 W x 1200 D x 73 H REAR OUTLET	150	150	540	930
Standard Corner	Ivory	SB39AI	914 W x 914 D x 73 H REAR OUTLET	150	150	430	680
		SB69AI	914 W x 914 D x 73 H CENTRE OUTLET	335	335	430	680
		SB29AI	1000 W x 1000 D x 73 H REAR OUTLET	150	150	430	800
		SB79AI	1000 W x 1000 D x 73 H CENTRE OUTLET	355	355	430	800
		SB59AI	1200 W x 1200 D x 73 H REAR OUTLET	150	150	540	930

LHR = Left Hand Return RHR = Right Hand Return DBL = Double Entry

### DISCLAIMER

Bathroom Products Australia P/L ABN 87 079 297 617 The manufacturer/distributor reserves the right to vary specifications or delete models from their range without prior notification. Dimensions and set-outs listed are correct at the time of publication however the manufacturer/distributor takes no responsibility for printing errors. All sizes quoted are in millimetres and are nominal. Product colour shown is as near to actual product colour as production methods permit. Warranty terms apply, refer to [www.marbletrend.com.au](http://www.marbletrend.com.au).

### Note:

Showers Bases can distort if not stored correctly! If not installed when received, Shower Base must be kept laid upright, flat, fully supported, not leaning on waste outlet, and not exposed to temperatures exceeding 55°C. Distortion occurred due to incorrect storage is not covered by warranty.

Showers Base must be tested for correct draining prior to installation.

[www.marbletrend.com.au](http://www.marbletrend.com.au)

T: 1300 717 717