


Premium 35mm Universal Shower Mixer Body Only



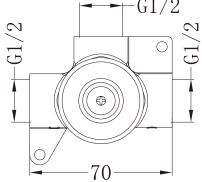

Dimensions are nominal measurements only.

15 WaterMark AS/NZS 3718 WM-060073

SPECIFICATION

SKU NRUB002P

WATERMARK LICENSE WM-060073

TEMPERATURE RATING MIN 1°C-MAX 75°C

PRESSURE RATING MIN 150KPa-MAX 500KPa


PACKING INCLUDES


- 1x mixer body

Notes: Only Compatible for use with all Bianca and Mecca Bath / Shower Mixers





Installation Instruction For Body

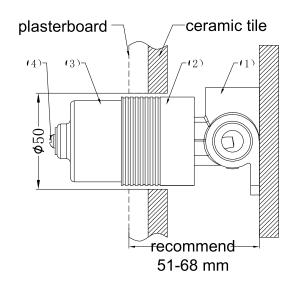

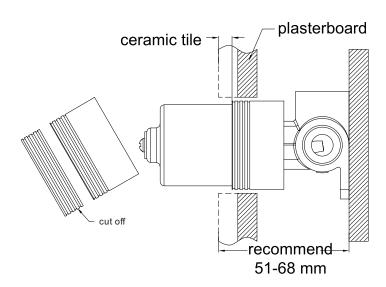

- Fix body (1) on noggin and ensure installation depth is
 51-68mm from noggin to ceramic tile.
- Caution: Do not take off plastic sleeve on body.
- 2. Connect cold water hose and hot water hose and conduct water pressure test for leak.
- 3.Install plasterboard after drilling a $\phi 50\,$ hole according to above picture.
- 4. Make a mark on plastic sleeve (2) at 4-7cm from surface of ceramic tile to body.
- 5.Remove self-tapping screw, washer and plastic sleeve, and cut off the plastic sleeve from the mark.
- $\hbox{6.Install self-tapping screw,} \hbox{washer and } \hbox{plastic sleeve back} \\ \hbox{to the body successively} \; . \\$

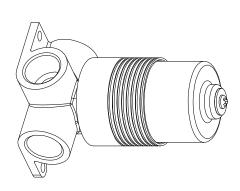


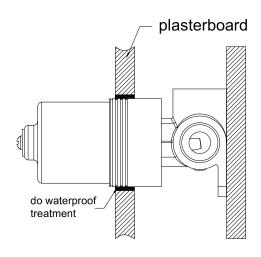

7.Do waterproof treatment for gap of plasterboard and body.




Installation Instruction For Trim Kits

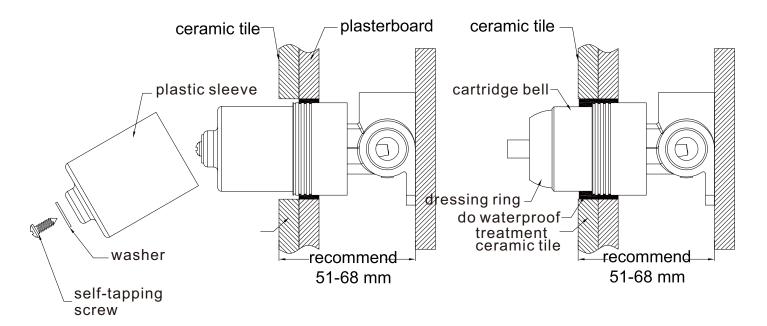

- 1.Install ceramic tile after drilling a $\phi 50$ hole according to above picture.
- 2.Remove self-tapping screw, washer, plastic sleeve, grub screw.

- 3.Put on cartridge bell.
- 4. Screw on dressing bell.
- 5.Do waterproof treatment for the gap between ceramic tile and cartridge bell.

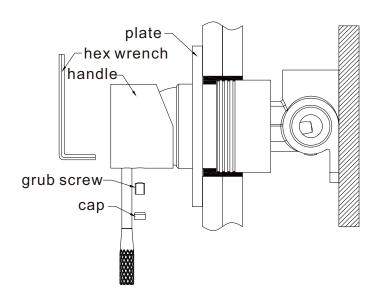

- 6.Put plate onto body.
- 7. Put washer onto cartridge stick, put on handle and tighten grub screw of handle firmly by hex wrench, put cap into handle.