


After cutting the U channel to size:


1

Screw the aluminium U channel to wall using counter sunk screws.
(Ensure wall plugs are used if an internal stud cannot be located)
Recommended minimum 3x screw fixings per channel evenly distributed
from top to bottom of U channel
(Fixings not supplied - source own fixings depending on substrate)

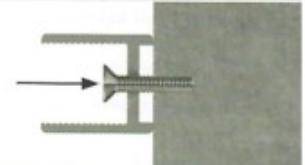


2

Run the L shaped rubber wedge inside the U channel with 'fin' facing
inside the shower.
If need be, consider making a hole in PVC where screws are placed
to stop PVC bulging out. Screw head must not penetrate past PVC if
hole is made.

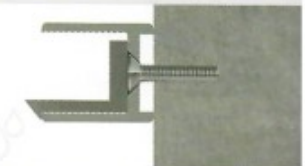


3

Insert 10mm glass panels

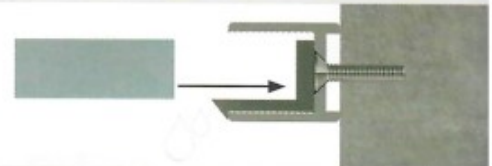

4

With a square offcut of soft pine timber & a rubber mallet, tap in the
clear plastic wedge on the outside of the showerscreen, working from
the bottom up.

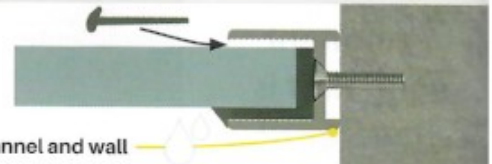

Apply silicone seal between U channel and wall