











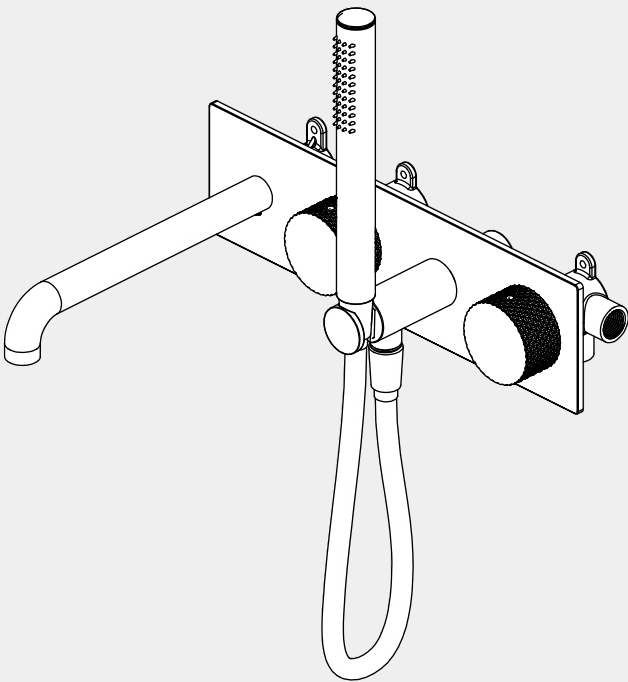

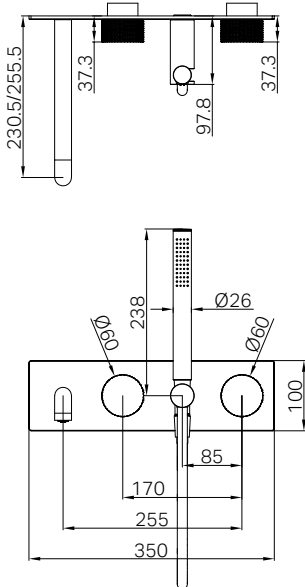

Opal Progressive Shower System With Spout

Nero



Versions:202405




Drawing	Specifications	Group Item				
	<p>Watermark License WM-060073</p> <p>Temperature Rating Min 1°C-Max 75°C</p> <p>Pressure Rating Min 150kpa - Max 500kpa</p>	<p>1x Universal Body 1x Trim Kits Only</p>				
<p>Finish & SKU</p> <table><tr><td> Graphite NR252003a(230/250)GR</td><td> Brushed Bronze NR252003a(230/250)BZ</td></tr><tr><td> Brushed Gold NR252003a(230/250)BG</td><td> Brushed Nickel NR252003a(230/250)BN</td></tr></table>			 Graphite NR252003a(230/250)GR	 Brushed Bronze NR252003a(230/250)BZ	 Brushed Gold NR252003a(230/250)BG	 Brushed Nickel NR252003a(230/250)BN
 Graphite NR252003a(230/250)GR	 Brushed Bronze NR252003a(230/250)BZ					
 Brushed Gold NR252003a(230/250)BG	 Brushed Nickel NR252003a(230/250)BN					
<p>*Dimensions are nominal measurements only.</p>						



*Dimensions are nominal measurements only.

Installation Instruction For Shower System Body Only

Installation Depth 51-66mm

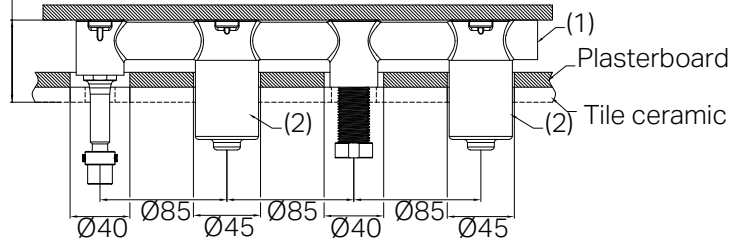


1. Fit off in-wall mixer body into wall structure, and ensure the installation depth is 51-66mm from the tile surface.
2. Connect hot, cold water lines. Test and check for leaks.
3. Install the plasterboard and make holes with diameters of Ø40, Ø45, Ø40, and Ø45.
4. Apply waterproofing between the plasterboard and the mixer body (1) to prevent any potential leaks.
5. The in-wall mixer body installation is complete. Check for leaks.

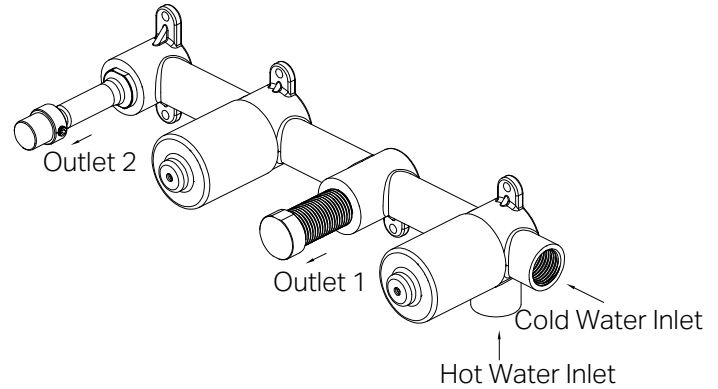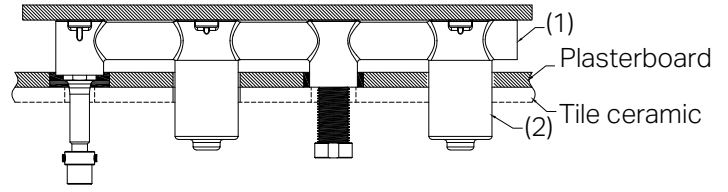


Installation Instruction For Shower System Trim Kits Only


Installation Depth 51-66mm

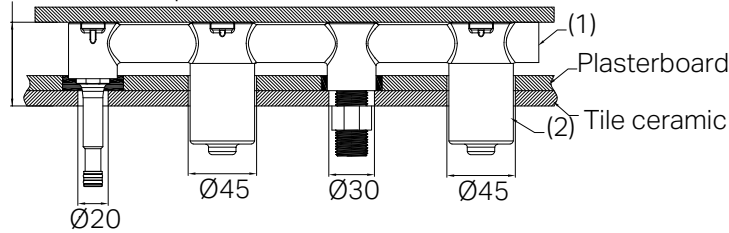


1. Install tiles and drill holes with diameters of Ø20, Ø45, Ø30, Ø45.
2. Remove the pressure test plug.
3. Assemble the cutting gauge onto the mixer body, make it flush with the tile surface, and trim off any excess part after assembly.

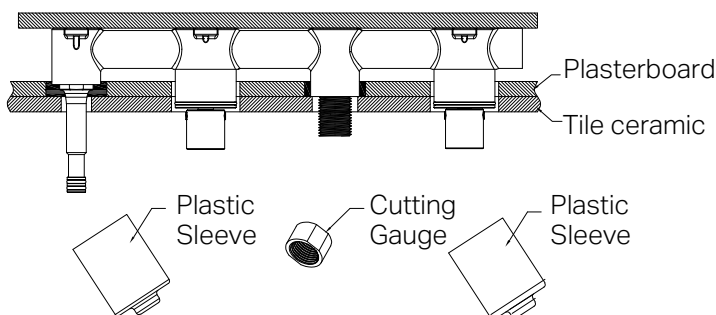


4. Remove the cutting gauge and protective sleeves.

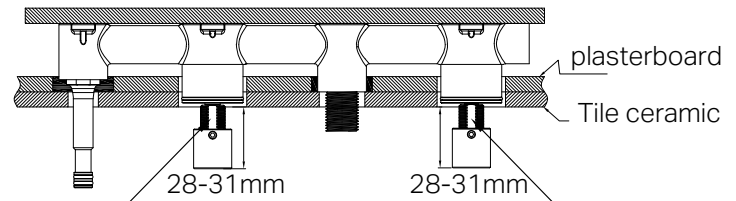





The grub screw needs to be tightened onto the surface.

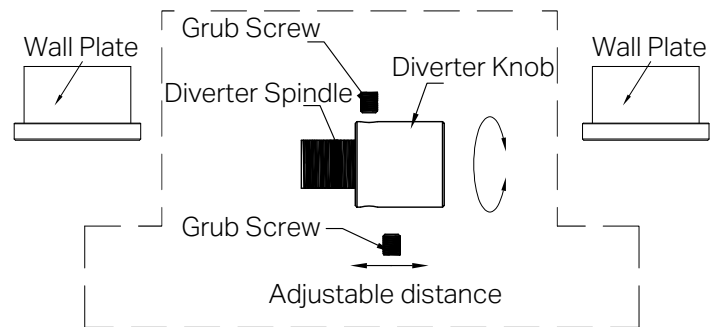

5. Adjust the distance between the Diverter knob and the tile surface to 28-31mm as shown in the diagram.
6. Place the wall plate onto the mixer body.

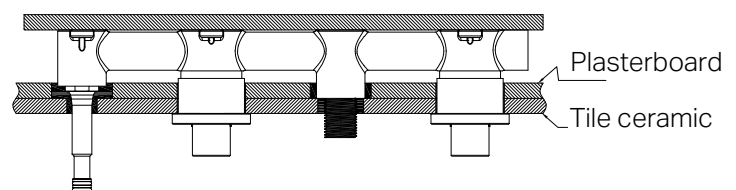



7. Apply waterproofing in the gap between the ceramic tile and the water outlet.

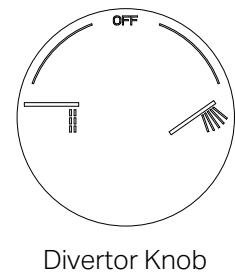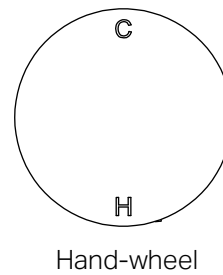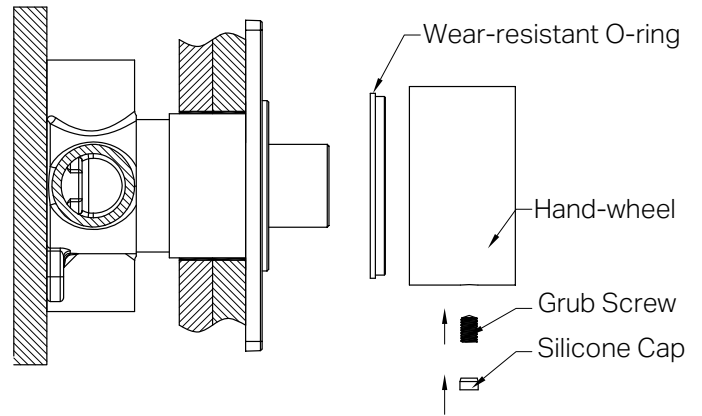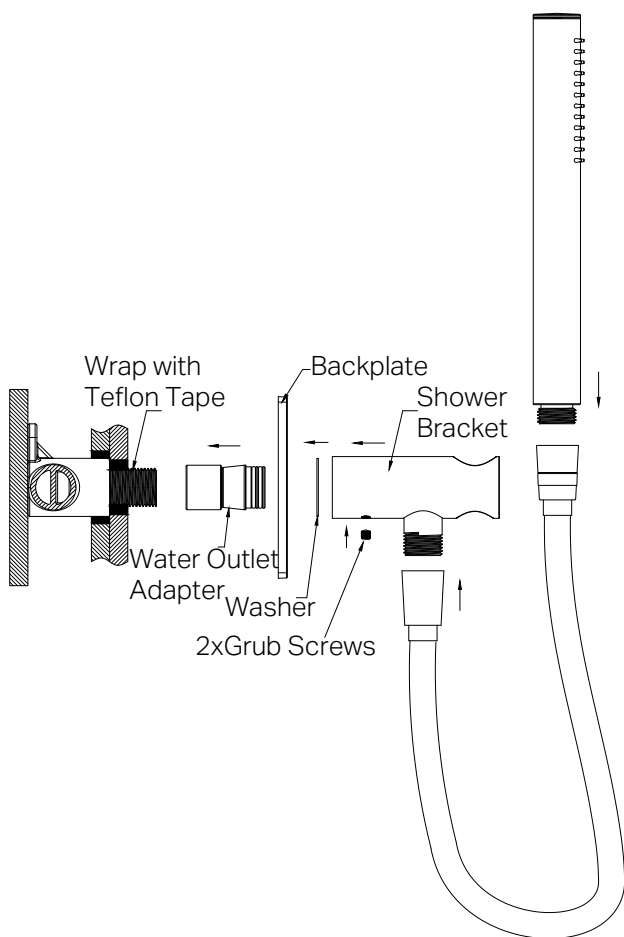

8. Thread the water outlet adapter onto the in-wall body, and seal with Teflon tape.
9. Assemble the Backplate, washer, and shower bracket onto the main body, then secure with screws.
10. Attach the shower hose and hand shower, securing them in place.

- Follow step 11 to install the Hand-wheel and the Divertor Knob
11. Attach the wear-resistant O-ring, hand-wheel/ Divertor knob, grub screw, and silicone cap, securing them in place.

2x O-rings Must Be Installed

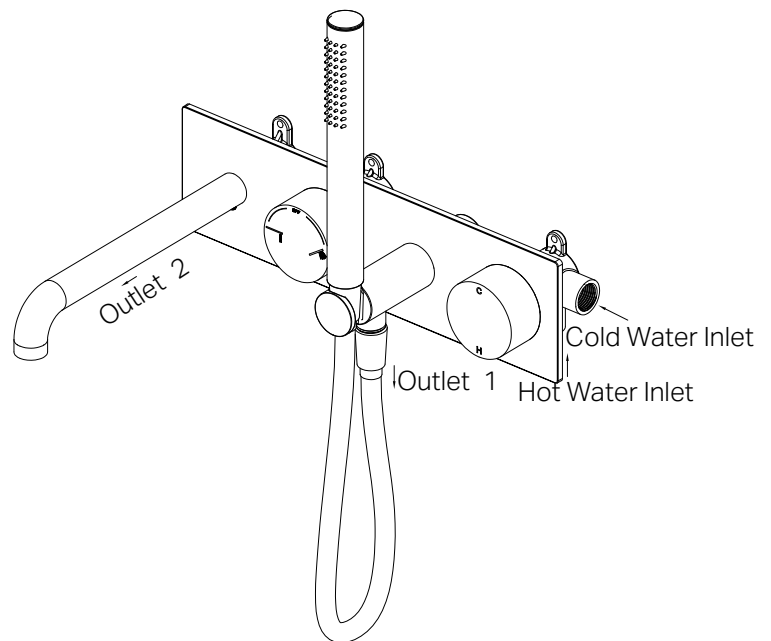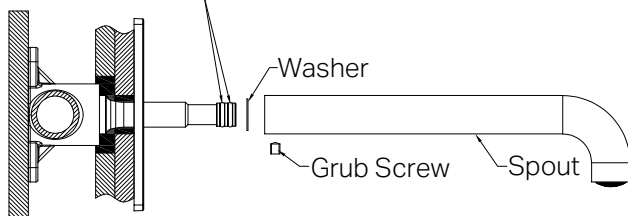

12. Assemble washer, and spout onto the mixer body, then secure with grub screws.
- Please Note: Waterproofing is required.

13. Installation is now complete. Test for leaks.

Nero

